


Materials Needed


- Screw driver or drill
- Mounting screws included in box

IMPORTANT


- For wall and ceiling surfaces ONLY
- DO NOT Install on floors!

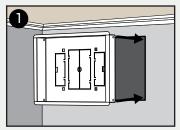


Dry-fit Base into duct opening.

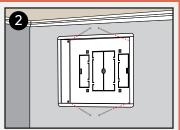


Ensure flange is flat to the wall. Use provided screws to fasten.

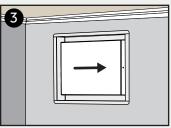


Insert **Tray** and and slide into place until secured.

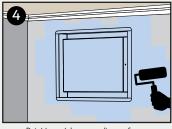

Paint to match surrounding surfaces.
*Can paint inner surfaces as well,
or use wallpaper.

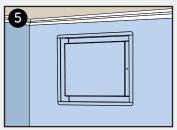

Enjoy!

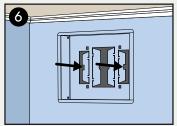

To adjust airflow, remove **Tray** and bend dampers located in **Base** to desired position.

Control Air Flow

Slide to remove Tray and adjust dampers open and closed. For optimal air flow, push flanges past 90°

Additional Support

support@ariavent.com / www.ariavent.com

Patent Information

www.ariavent.com/pages/patents

